

**PWM\*** Pins PA5 & PA15 cannot both be used for PWM simultaneously.

**PWM\*** Pins PA6 & PB4 cannot both be used for PWM simultaneously.

**MRX\*** UART pin for MIDI input. Can receive direct MIDI signals from another MCU or external MIDI signals via an optocoupler.

**MI4\*, MI5\*** DIN MIDI input. Not connected by default. Solder an SMD octocoupler to the bottom side of the PCB to use these pins.

