Ksoloti Core v0.6 and earlier

PWM* Pins PA5 & PA15 cannot both be used for PWM simultaneously.
PWM* Pins PA6 & PB4 cannot both be used for PWM simultaneously.

MRX* UART pin for MIDI input. Can receive direct MIDI signals from another MCU or external MIDI signals via an optocoupler.
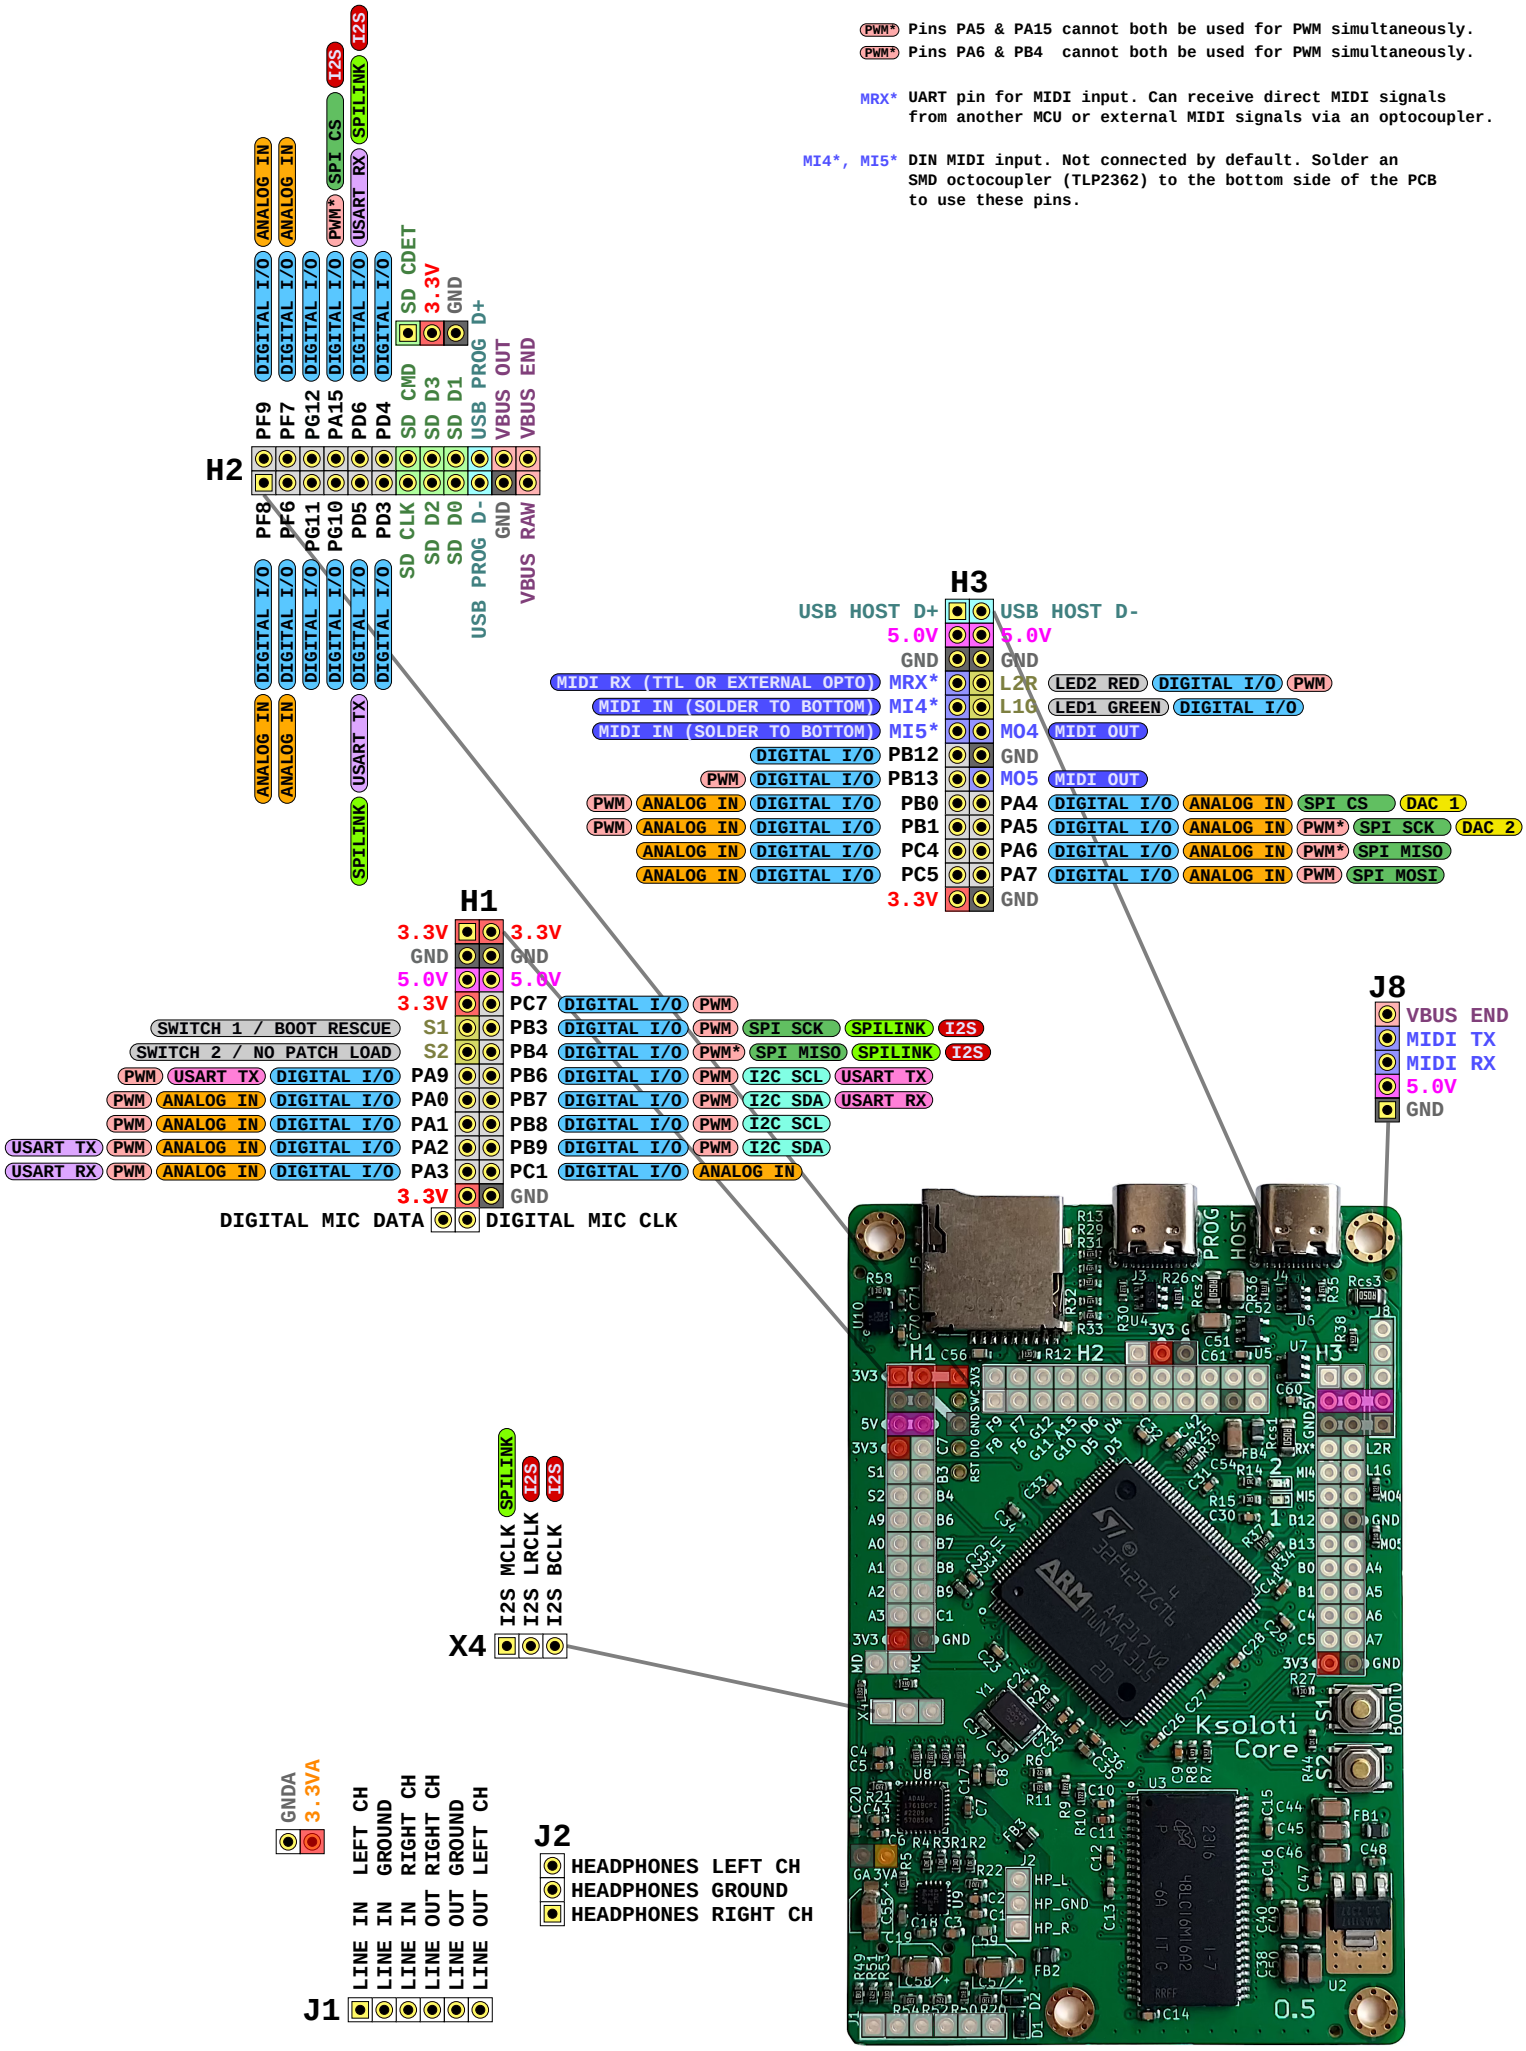
MI4*, MI5* DIN MIDI input. Not connected by default. Solder an SMD octocoupler (TLP2362) to the bottom side of the PCB to use these pins.